



**ATTENTION DO NOT COMPLETE THESE STEPS UNTIL BI-DIRECTIONAL METER IS INSTALL BY YOUR UTILITY COMPANY**

## STEP BY STEP GUIDE TO TURNING ON YOUR CENTRAL STRING INVERTER PHOTOVOLTAIC SYSTEM

- STEP 1. TURN AC DISCONNECT TO THE “ON” POSITION. WILL BE LABELED WITH “PHOTOVOLTAIC SYSTEM DISCONNECT”. DISCONNECT IS OPERATED WITH PULL OUT HANDLE INSIDE THE BOX (PHOTO A) OR A LEVER ON THE OUTSIDE OF THE BOX (PHOTO B)

PHOTO A



PHOTO B



STEP 2. (FOR SYSTEMS WITH 2 INVERTERS ONLY, IF ONLY ONE INVERTER GO TO STEP 3)  
TURN BREAKERS LABELED PHOTOVOLTAIC SOLAR BREAKERS IN PV SUB PANEL  
(PHOTO C), TO THE “ON” POSITION.

PHOTO C



STEP 3. TURN ON BREAKER LABELED PHOTOVOLTAIC SOLAR BREAKERS IN MAIN SERVICE  
PANEL (MSP) TO THE “ON” POSITION (PHOTO D)

PHOTO D



STEP 4. TURN HAND TURN DIAL DISCONNECT AT INVERTER (PHOTO E) TO “ON” POSITION

PHOTO E



STEP 5. WAIT FOR GREEN LED LIGHT TO APPEAR (GREEN LED LIGHT INDICATES THAT THE SYSTEM IS OPERATING PROPERLY)

IF YOU HAVE ANY ADDITIONAL QUESTIONS PLEASE CALL US AT 877-834-SUN8 OR EMAIL US AT [INFO@SUNTECSOLARENERGY.COM](mailto:INFO@SUNTECSOLARENERGY.COM)

**THANK YOU FOR BEING PART OF THE SUN-TEC FAMILY**