



ATTENTION DO NOT COMPLETE THESE STEPS UNTIL BI-DIRECTIONAL METER IS INSTALL BY YOUR UTILITY COMPANY

STEP BY STEP GUIDE TO TURNING ON YOUR CENTRAL STRING INVERTER PHOTOVOLTAIC SYSTEM

- STEP 1. TURN AC DISCONNECT TO THE “ON” POSTION. WILL BE LABELED WITH “PHOTOVOLTAIC SYSTEM DISCONNECT”. DISCONNECT IS OPERATED WITH PULL OUT HANDLE INSIDE THE BOX (PHOTO A) OR A LEVER ON THE OUTSIDE OF THE BOX (PHOTO B)

PHOTO A



PHOTO B



STEP 2. TURN ON BREAKER LABLED PHOTOVOLTAIC SOLAR BREAKERS IN MAIN SERVICE PANEL (MSP) TO THE "ON" POSITION (PHOTO C)

PHOTO C



STEP 3. TURN HAND TURN DIAL DISCONNECT AT INVERTER (PHOTO D) TO "ON" POSITION

PHOTO D



STEP 4. WAIT FOR GREEN LED LIGHT TO APPEAR (GREEN LED LIGHT INDICATES THAT THE SYSTEM IS OPERATING PROPERLY)

IF YOU HAVE ANY ADDITIONAL QUESTIONS PLEASE CALL US AT 877-834-SUN8 OR EMAIL US AT INFO@SUNTECSOLARENERGY.COM

THANK YOU FOR BEING PART OF THE SUN-TEC FAMILY